

# Serial drilling jig VARIANT V 1999 Finger Protection frame

for the drilling on the frame



## Note

### Fitting instructions

1. Adjust drilling jig.
2. Position serial drilling jig with the end stops to the upper door rebate and clamp.
3. Drill holes with  $\varnothing 3,0$  mm drill bit.

### Scope of supply


- 2 x drilling jigs
- 1 x square connecting rod
- 2 x stops
- 1 x drill bit  $\varnothing 3,0$  mm
- 1 x fitting instruction

## Installation tools


V 1999 Finger Protection

## Item

Finish(es)	without (000)
VPE	pack of 1
DIN	DIN right and left hand
Item No.	5 251125 0 00001
EAN	4015471127077

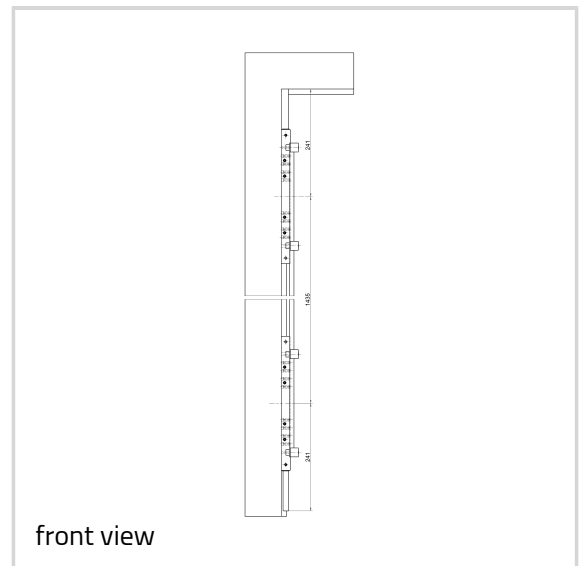

front view

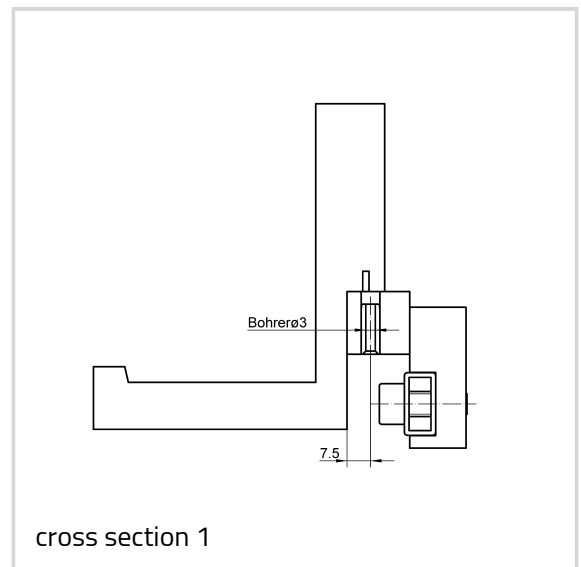

cross section 1

Serial drilling jig VARIANT V 1999 Finger Protection frame

